











## What to do if...

## What to do if...

	A tire punctures	P. 512/ 522	If you have a flat tire
	The engine does not start	P. 73 P. 523 P. 529	Immobilizer system If the engine will not start If the 12 volt battery is discharged
	The shift lever cannot be moved out	P. 524	If the shift lever cannot be shifted from "P"
	The engine coolant temperature gauge enters the red zone	P. 533	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 525	If you lose your keys
	The battery runs out	P. 529	If the 12 volt battery is discharged
	The doors cannot be locked	P. 37	Doors
	The horn begins to sound	P. 75	Alarm
	The vehicle is stuck in mud or sand	P. 536	If the vehicle becomes stuck

 The warning light or indicator light comes on P. 488 If the warning light turns on



Warning lights

	Brake system warning light		Malfunction indicator lamp
or		or	
	P. 488		P. 489
	ABS warning light		Driver's seat belt reminder light
or			
	P. 489		Front passenger's seat belt reminder light
	ECB*/VSC warning light		Tire pressure warning light
	P. 489		P. 490
	Low fuel level warning light		Electric power steering warning light
	P. 490		P. 489
	SRS warning light		Pre-collision system warning light
	P. 489		P. 489
	Open door warning light		Master warning light
	P. 490		P. 491
	Charging system warning light		
	P. 488		

\*: Electronically Controlled Brake System

 The warning message is displayed P. 497 If the warning message is displayed